



1. INSTALL A SINGLE ACCESS DRIVE USING 2-4 ACCESSIBLE (SEE DETAIL) PLACED OVER FILTER FABRIC. USE TO PREVENT TRACKING DIRT ONTO THE ROAD BY ALL VEHICLES.
2. DRAINAGE THROUGHOUT CONSTRUCTION UNTIL DRAINAGE IS PAVED TO PREVENT TRACKING OF SOILS ONTO THE ROADWAY.
3. TO PREVENT TRACKING OF SOILS ONTO THE ROADWAY.


TEMPORARY CONSTRUCTION ENTRANCE (CE)

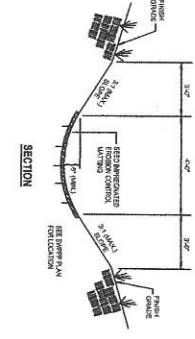


GEOTEXTILE MATTED DITCH DETAIL (GF)

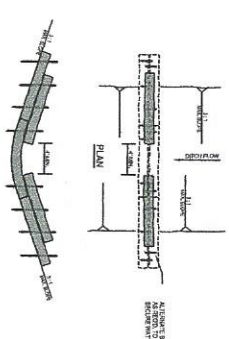


STRAW WATTLE CHECK DAM (SW)

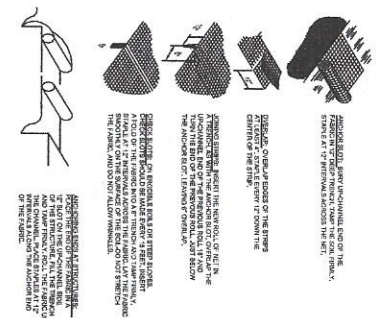


MATTED SLOPE PROTECTION (GM)

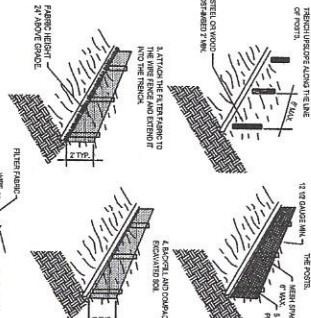


SILTATION FENCING DETAIL (SF)

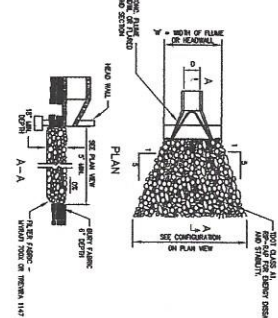


OUTLET PROTECTION DETAIL (OP)

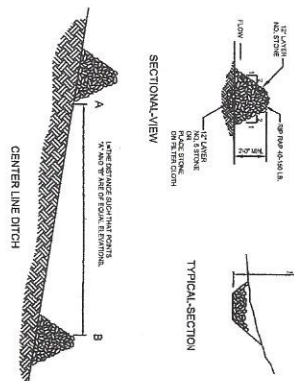


STONE CHECK DAM (CK)

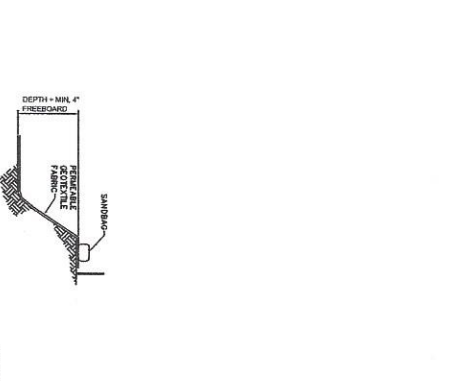

STONE FILTER RING AT HEADWALL (FR)

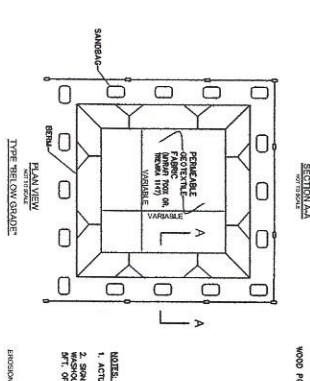

CONCRETE WASHOUT DETAIL (CW)

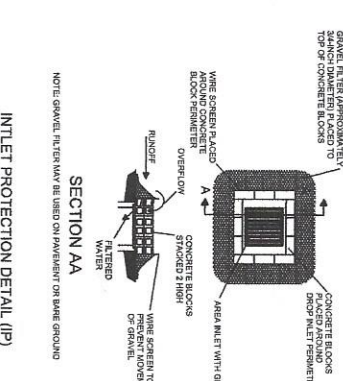

INLET PROTECTION DETAIL (IP)

